

How To Leakdown a Barrel Valve


1. Adjust Butterflies Air Gap
2. Block off all injector hat return lines except for the hat nozzles
3. Connect tester to outlet of compressor
4. Set air compressor to read 0 on the gauge
5. Connect tester to inlet of barrel valve
6. Read % leakage
7. Adjust linkage turnbuckle on barrel valve for desired leakage



Scan here for video instructions



*Empowering Racers
Since 1989*

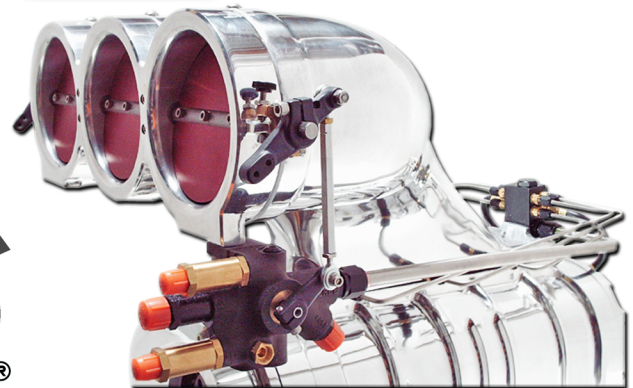

Toll Free Tech 800.576.7661

www.DragParts.com