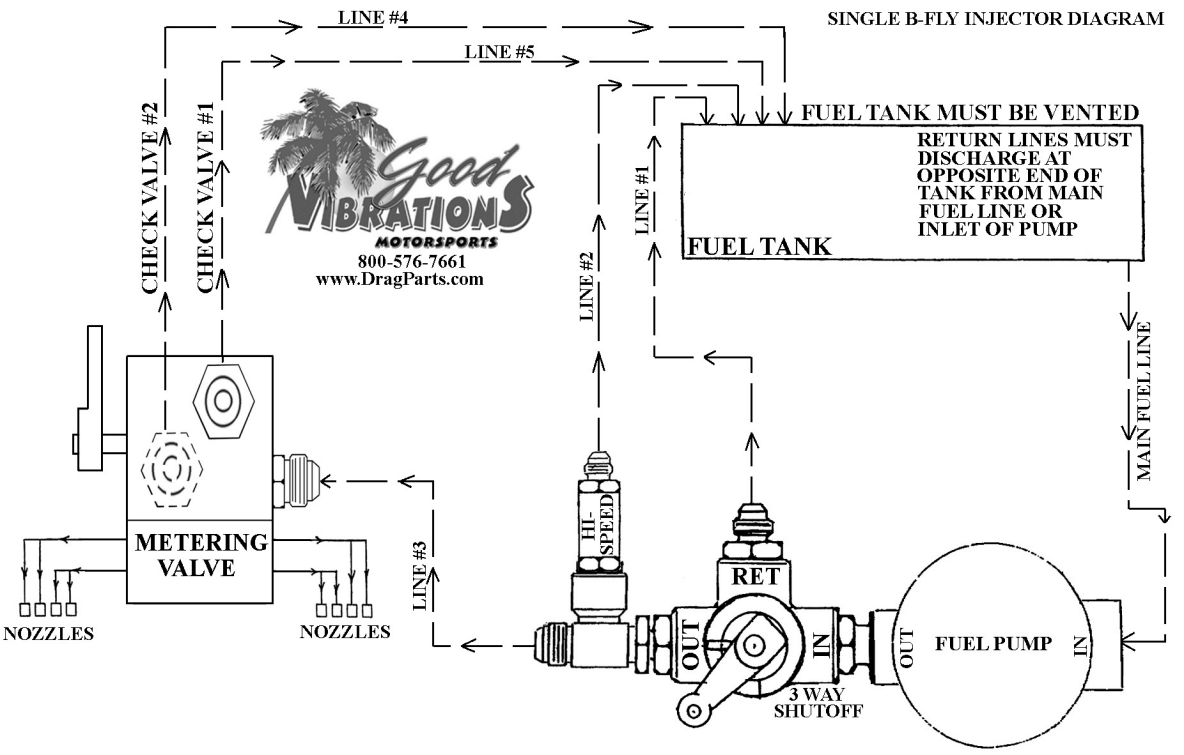
SINGLE B-FLY INJECTOR DIAGRAM
LINE #4
LINE #5
FUEL TANK MUST BE VENTED
RETURN LINES MUST DISCHARGE AT OPPOSITE END OF TANK FROM MAIN FUEL LINE OR INLET OF PUMP
FUEL TANK
CHECK VALVE #2
CHECK VALVE #1
LINE #1
LINE #2
LINE #3
MAIN FUEL LINE
Good VIBRATIONS
MOTORSPORTS
800-576-7661
www.DragParts.com
METERING VALVE
NOZZLES
NOZZLES
HI-SPEED
RET
OUT
IN
OUT
IN
FUEL PUMP
3 WAY SHUTOFF