


Take measurement "X"
and fit it into one of the
following categories below:

- A) 4.00" - 4.75": Use 1.75" Standoff Kit.
- B) Above 4.75" - 5.50": Use 2.65" Standoff Kit.
- C) Above 5.50" - 6.00": Use 3.00" Standoff Kit.
- D) Above 6.00" - 6.75": Use 4.00" Standoff Kit.

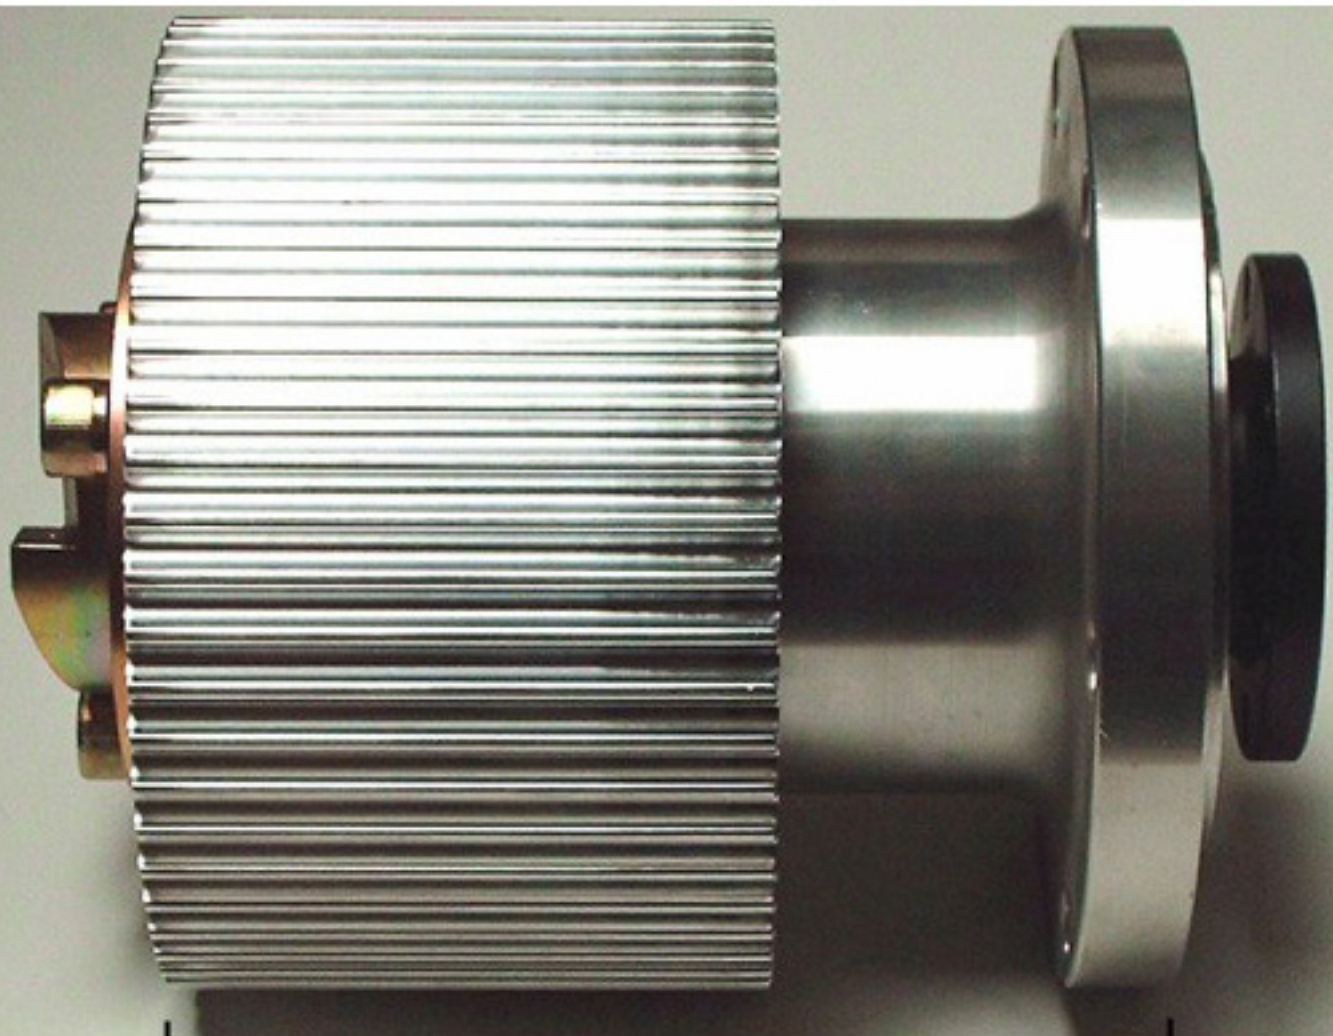

Please Specify if you are running a
Front discharge blower with a 2"
thick bearing plate

X